

WAWAK®

HOW TO CHANGE A ROTARY CUTTER BLADE

STEP ONE

For safety, make sure the blade cover is on. Face the blade side down.



STEP TWO

With the blade side down, hold the flat side of the blade in place with your non-dominant hand. Unscrew the nut.




STEP THREE

Remove nut and then washer, making sure to set them down in the same orientation they were removed. This means the washer should be sitting with curved side up like a bowl.




STEP FOUR

Slide the handle off of the blade.

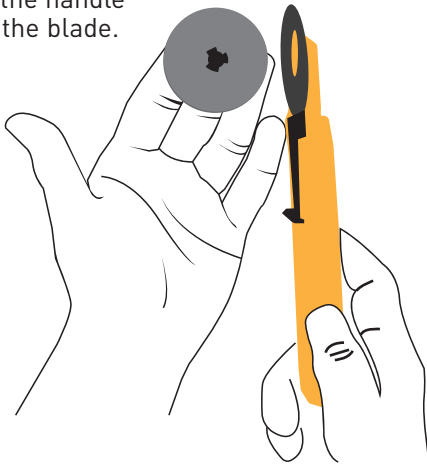


STEP FIVE

After removing the handle you will have the center wheel with stem and the blade itself separate from the whole. Carefully remove the old blade from the center wheel and take the new blade from its case.

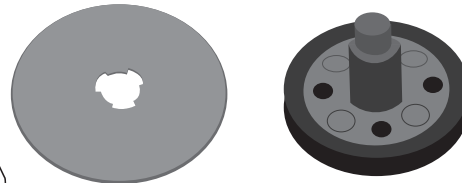

STEP SIX

Put the new blade onto the stem of the center wheel, be careful of the edges.

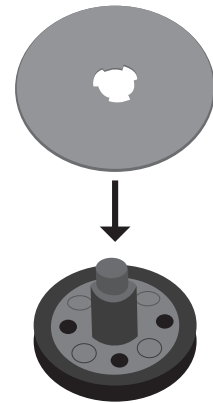


STEP SEVEN

Place the handle back over the center wheel with the stem coming up through the back of the handle.



STEP EIGHT

Replace the washer with the "bottom of the bowl" closest to the rotary cutter, this should be the same orientation it was removed in.

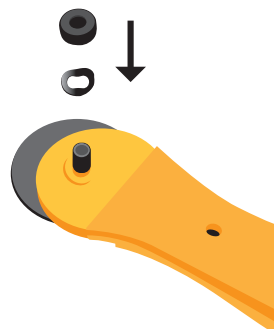

STEP NINE

Screw the nut back onto the center wheel. When the center wheel starts to spin, you are done.



If you have any questions, please call us at 800-654-2235 or email customerservice@wawak.com.