


**Thermal Fuse (Part# S6056)**

**⚠ IMPORTANT**

- Turn off the iron and unplug the iron from the power supply.
- Close the Water Valve on the Water Tank and pull the silicon hose from the iron.
- Wait for the iron to cool down before attempting to troubleshoot the iron.

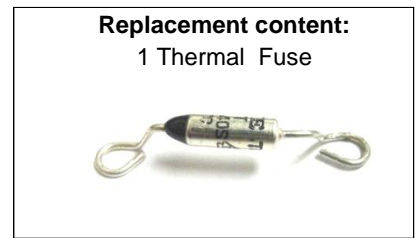

**Steps to replace the Thermal Fuse**

1-Remove the *Bushing Cap* holding it and pulling up with your fingers.



2-Remove the *Temperature Control Dial* assembly using a phillips screw driver.



3-Remove *Screw & Spring* set



4-Remove the *Temperature Control Dial Knob*.



5-Remove *Main Switch Cover* screws (3)



6-Gently open the *Main Switch Cover*.



7-Remove *Thermal Fuse* screws (2) and replace *Thermal Fuse*

