



BAG FEET AND MAGNETIC SNAP INSTALLATION INSTRUCTIONS

TOOLS YOU WILL NEED BEFORE GETTING STARTED:



- 1. Bag feet or Magnetic Snaps (any bag hardware with prongs)
- 2. Ruler/Measuring Implement
- 3. Marker
- 4. Seam Ripper or X-acto Knife




STEP ONE:

Measure and mark the bottom of the bag where you would like to place the feet.


STEP TWO:

Cut **small** slits into the bag bottom with your seam ripper.

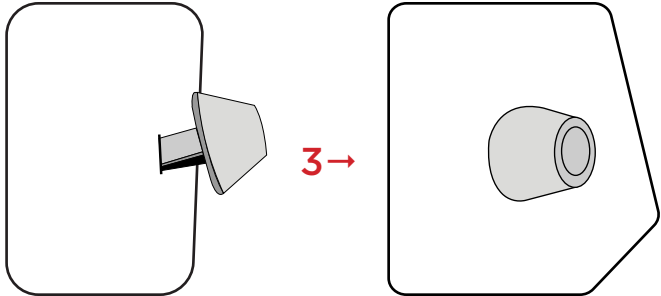


STEP THREE:

Push the prong end through the fabric until the flat side is flush with the outside bag fabric.

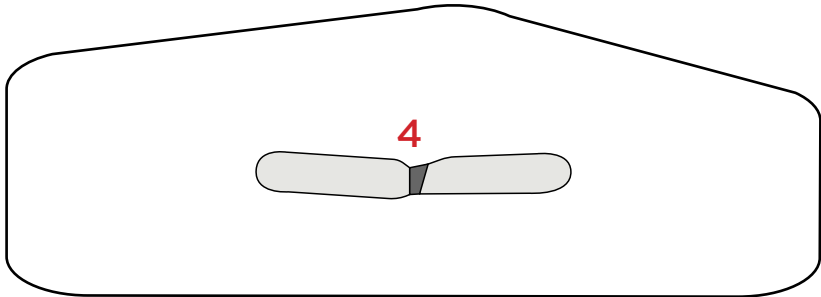

STEP FOUR:

Spread the prongs apart until they are flat on the inside of the bag fabric.

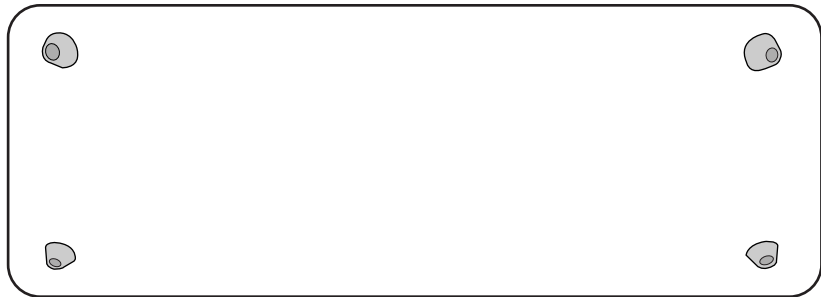

STEP FIVE:

Complete all corners as needed.