


# WAWAK<sup>®</sup>

## SEAM BINDING

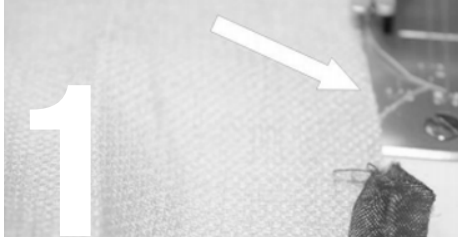

### FIRST

PRESS UP THE HEM.



### NEXT

PLACE SEAM BINDING OVER THE RAW EDGE OF THE HEM ALLOWANCE AND THE RIGHT SIDE OF THE FABRIC.



### THEN

STITCH ALONG THE EDGE OF THE RIBBON.




### NOW

CONTINUE TO STICH PAST THE BEGINNING, COVERING THE RAW EDGE OF THE RIBBON. TRIM THE RIBBON, LEAVING 3" EXTRA. FOLD UNDER THE EDGE OF THE RIBBON.



### FINISHING UP

STITCH TO THE FOLD AND STITCH THE FOLD DOWN.

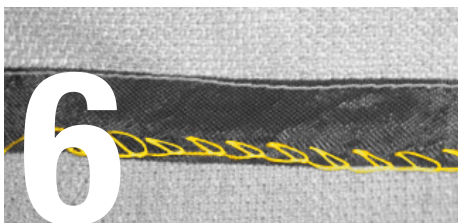

### FINAL STEP

STITCH A BLIND HEM USING THE EDGE OF THE RIBBON AS THE HEM ALLOWANCE EDGE.

