


**SP3 PLUNGER REPAIR KIT**

**⚠ IMPORTANT**



- Turn off the SP3 and unplug the Power Cord from the power supply.
- Close the Ball Valve from the Steam Supply line.
- Wait for the SP3 to cool down before attempting to repair the unit.

**Steps to replace the Repair Kit**

1- Remove screws (3) with a phillips screwdriver to open the cover from the box.

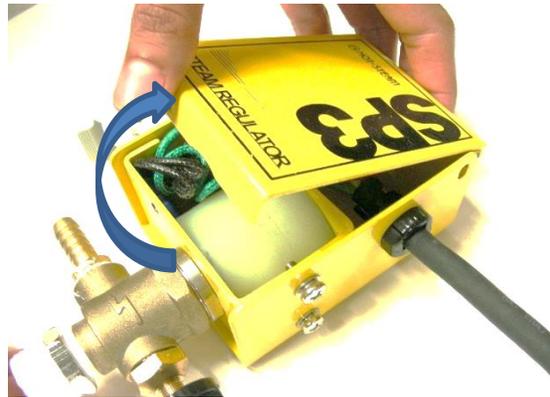

2- Remove the nut with a wrench and remove the Solenoid Valve from the box.

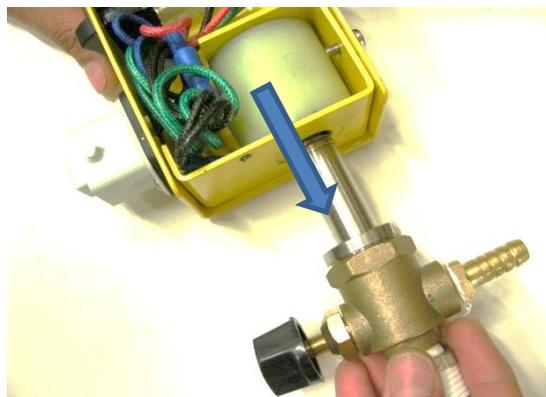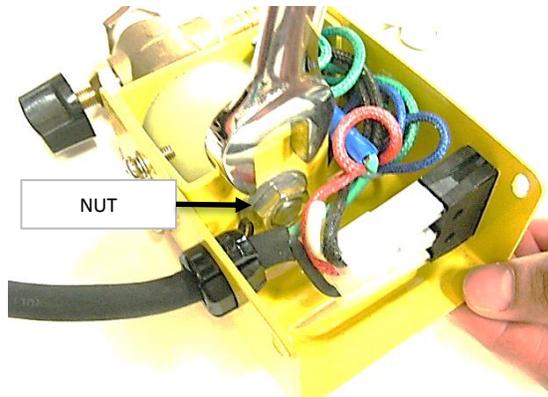

3- Hold the Body (use a vise to hold the body if necessary) and remove the Steam Pipe with a wrench. Remove and replace the Plunger&Spring Set and the Gasket from the Steam Pipe.

